




The Chartered Institute of Building presents

How to save a small fortune on asbestos management

a webinar presented by



Introduction

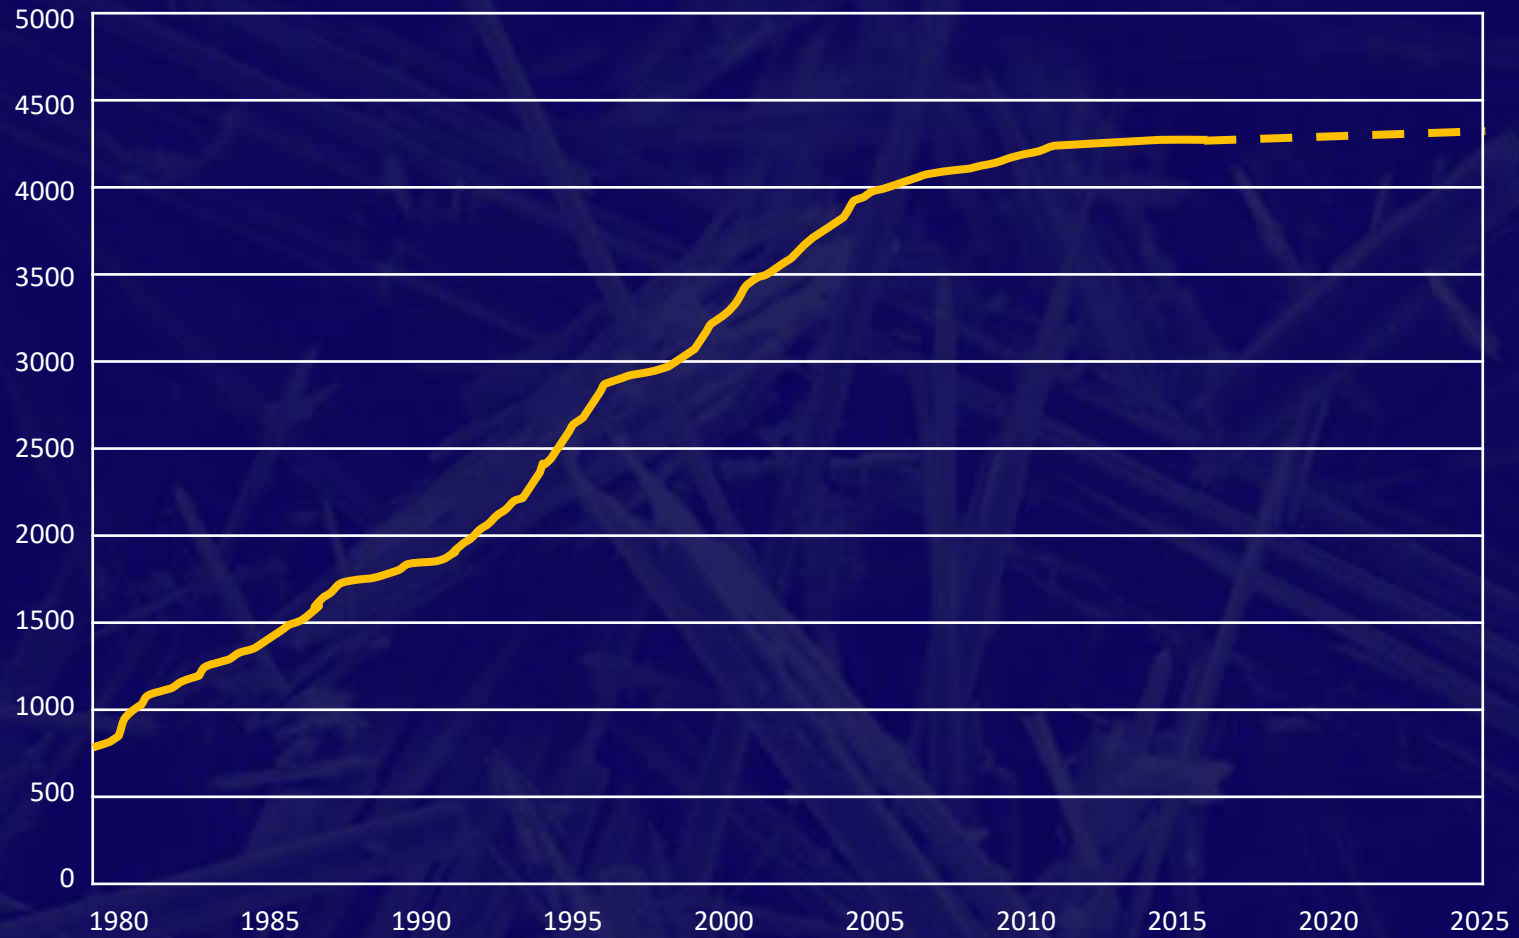

2 Limit the damage



3 Minimise exclusions

- Area was locked
- Areas is enclosed i.e. void, duct
- location is too high to access using ladder
- Plant not isolated
- Biological hazards that prevent a surveyor entering
- Structural issues – unsafe access
- Inhabited areas
- Sensitive areas that require constant occupation- security etc
- Specialist trades for some areas like lift shafts etc

10 Consider the Big Picture

